KEENETIC
ORBITER 7

Quick Start Guide


BE3600 Wi-Fi 7 Ceiling Mount Access Point
with a 2-Port 2.5G Smart Switch
and Power over Ethernet

KAP-730

Scan the QR code to access the multilingual Quick Start Guide.
Deutsch, Francais, Español, Italiano, Български, Čeština, Dansk, Ελληνικά, Eesti, Suomi, Hrvatski, Magyar, Қазақша, Lietuviu, Latviski, Nederlands, Norsk, Polski, Português, Română, Русский, Slovenský, Slovenščina, Srpski, Svenska, Türkçe, Українська.
https://keenetic.com/qsg/kap-730

For technical support and other information, please visit
support.keenetic.com

Package contents

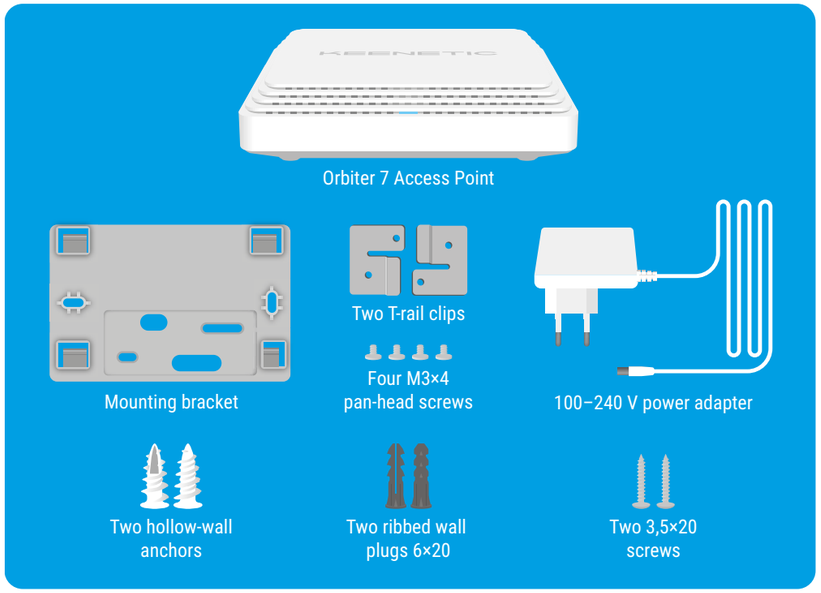

Overview

1. Status LED

Blinking green — The Keenetic Orbiter 7 Access Point (hereinafter 'Keenetic Access Point', 'Keenetic device') is starting up or updating its operating system.
Solid green — Internet connection is available.
Solid orange — No Internet connection.
Blinking orange — Quick connection session (WPS) in progress.
Off — Off.

2. Kensington Security Slot™

The Kensington Security Slot™ lets you attach a compatible lock to protect your Keenetic Access Point from theft.

3. Network Port 0

The Ethernet port supports speeds up to 2.5 Gbps and connects to a gateway, router, or switch. The port LED is on when connection is established, and blinks when data is being transferred.

4. Network Port 1 - PoE


The Ethernet port supports speeds up to 2.5 Gbps and connects to a gateway, router, or switch. It works with PoE Ethernet switches that provide 802.3at power (PoE+) and data over a single Ethernet cable. The port LED is on when connection is established, and blinks when data is being transferred.

5. Pinhole Reset Button

Pressing it once — Starts a Wi-Fi Protected Setup (WPS) session on the 2.4 GHz band.
Pressing it twice — Starts a Wi-Fi Protected Setup (WPS) session on the 5 GHz band.
Pressing and holding for 10 seconds — Restores the original factory settings and resets the administrator password.

6. DC Power Socket ⎓

For use with the supplied power adapter. Alternatively, the Access Point can be powered via the PoE Ethernet switch. If both PoE and DC power sources are available, the DC power source takes priority.

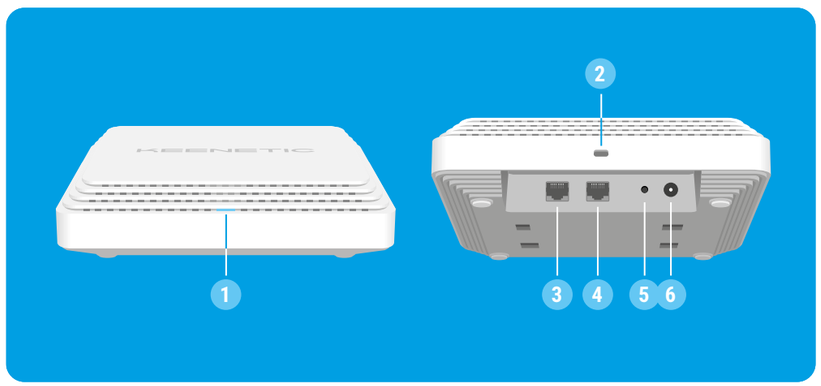


Mounting Options

This Keenetic Access Point can be placed on a flat surface or attached to a wall or solid ceiling using the supplied mounting kit, or to a suspended ceiling using the mounting kit and T-rail clips.


Mounting to a Wall or Solid Ceiling

1. Place the mounting bracket in the desired position. Ensure that the installation does not interfere with existing electrical or network wiring.
2. Mark two screw hole positions. Drill a 6 mm diameter hole in each of the marked spots.
3. Insert the ribbed plastic wall plugs into the holes. Or, in the case of a hollow-wall surface, screw the hollow-wall anchors in with a screwdriver.
4. Secure the mounting bracket to the wall or ceiling by driving the self-tapping screws into the anchors.
5. Connect the Ethernet cable and, if necessary, the power adapter to the Keenetic Access Point.
6. Attach the Keenetic Access Point to the mounting bracket and move it in the direction of the arrows until it locks into place.

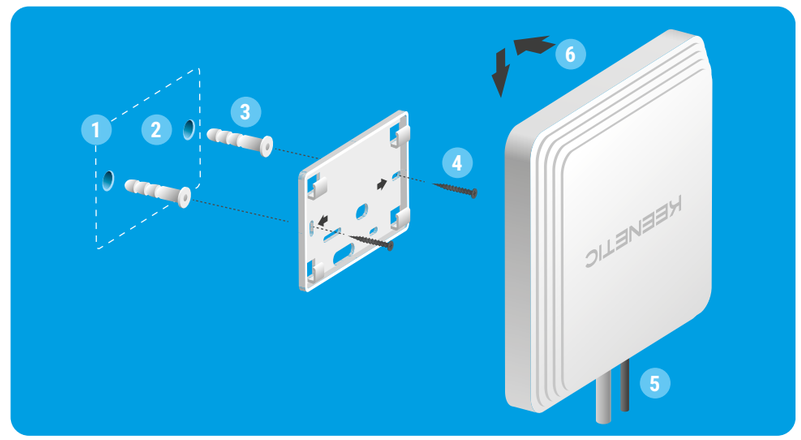


Mounting to a Suspended Ceiling Using T-rails

1. Secure the first T-rail clip to the mounting bracket with a screw. Depending on the T-rail size, use the 9/16" (14.3 mm) or 15/16" (23.8 mm) position.
2. Hook the second T-rail clip to the mounting bracket. Do not tighten the screw at this time.
3. Position the mounting bracket on the T-rail by placing the first T-rail clip on the rail base and pushing the second clip toward the rail base. Tighten the second screw.
4. Secure the mounting bracket to the T-rail with the two remaining screws.
5. Connect the Ethernet cable to the Keenetic Access Point.
6. Attach the Keenetic Access Point to the mounting bracket and move it in the direction of the arrows until it locks into place. Adjust the cables so that the exposed parts are hidden behind the case.

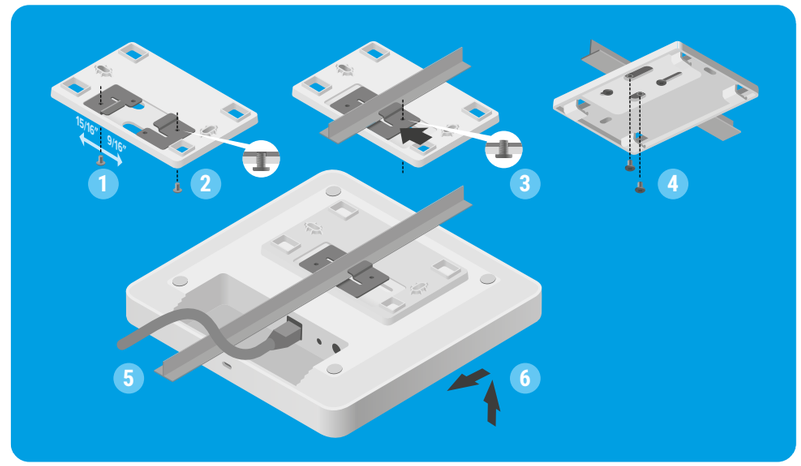

Standalone Installation

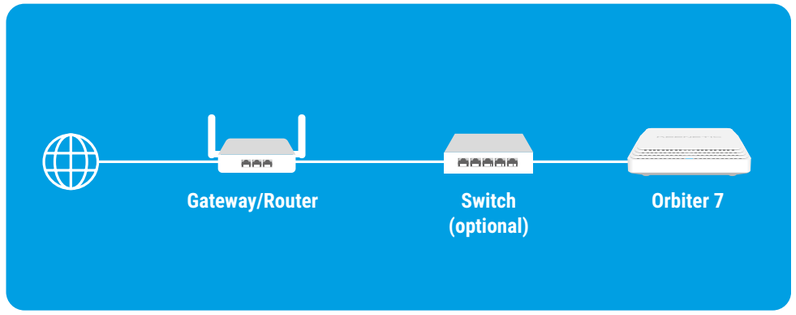

If your network only requires a few Wi-Fi access points, you can configure and manage them separately via their Web Interfaces.

Wired Connection


1. Power up and connect the devices as shown in the topology diagram. Ensure that a DHCP server (e.g. a router with DHCP enabled) is active to assign IP addresses to network devices. Check that the **Status LED** on the Keenetic Access Point is solid green.
2. Connect a mobile device / computer to the router network.
3. To configure the settings, first open the router's user interface to determine the IP address assigned to your Keenetic Access Point. This can usually be found under the 'Connected Devices' or 'DHCP Clients' section. Then enter this IP address in your web browser to open the Keenetic Access Point Web Interface. The Initial Setup Wizard screen will appear. Follow the instructions to set up your Keenetic Access Point.

Note: If your network does not include a DHCP server, the Keenetic Access Point uses its default IP address: 192.168.1.3

Wireless Connection

1. To set up this Keenetic Access Point as a Wi-Fi range extender or Wi-Fi Bridge, make sure it is within range of the required Wi-Fi network.
2. Using a thin object, such as a paper clip, a pen tip, or a pencil, press the **Pinhole Reset Button** ↻ on the Keenetic Access Point once to connect on the 2.4 GHz band, or twice to connect on the 5 GHz band. The **Status LED** will start blinking orange.
3. Within 2 minutes, launch the Wi-Fi Protected Setup on your wireless router. Usually it's done by pressing a dedicated button, refer to your router's manual for details.
4. The Keenetic Access Point will apply your wireless router's Wi-Fi access point name and password. Upon a successful connection, the **Status LED** will turn steady green.
5. Follow to steps 2 and 3 of the Wired Connection section.

Installation Using the Network Controller

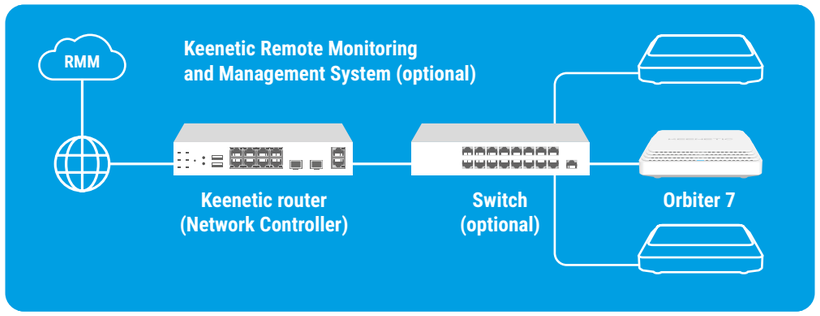

If a Keenetic device on your network, such as a Keenetic router, acts as the Network Controller, you can add this Keenetic Access Point to the controller and manage and monitor it centrally.

Keenetic RMM is a cloud-based, multi-site remote monitoring and management solution designed for small and medium-sized businesses to help keep critical networks and infrastructure online 24/7. Visit **rmm.keenetic.com** to learn more.

Wired Connection

1. Power up and connect the devices as shown in the topology diagram. Check that the **Status LED** on the Keenetic Access Point is solid green.
2. Connect a mobile device / computer to your Keenetic router network.
3. Launch a web browser, go to **my.keenetic.net** and sign in to the router. Go to **Local Network > Controller**. If you are using an earlier version of KeeneticOS, open **Wi-Fi System** instead. Select the Keenetic Access Point and click **Acquire**. Once the process is complete, the access point will be managed centrally by the Network Controller.

Note: If the Keenetic Access Point does not appear on the Controller page (Wi-Fi System in earlier versions of KeeneticOS), follow the instructions for resetting Keenetic Access Point in the Frequently Asked Questions section.

Wireless Connection

First, add the Keenetic Access Point to the Network Controller over a wired connection, as described in the previous section. Then disconnect its wired uplink and install the access point where it has reliable Wi-Fi coverage from the router or another managed access point. Once the wireless backhaul link has been established, the **Status LED** will light solid green.

The access point now uses Wi-Fi instead of Ethernet for its connection to the network. You can also connect wired devices to its Ethernet ports.

Frequently Asked Questions

What should I do if I cannot add a Keenetic Access Point to the Network Controller?

Reset the Keenetic Access Point to its factory settings (see below), then try adding it to the Network Controller again.

What should I do if I can't access the Internet with my Keenetic Access Point?

1. If the **Status LED** on the Keenetic Access Point is steady orange:
   - Check if your router is on and operating normally and has access to the Internet.
   - Check the Ethernet cable.
2. If the **Status LED** on the Keenetic Access Point is steady green, make sure that your mobile device / computer is connected to the right Wi-Fi network and set up to obtain an IP address and DNS servers automatically.

What should I do if I forget my Web Interface page password?

To create a new password, please follow the instructions to restore the factory settings on your Keenetic Access Point in the question below.

How do I reset/restore the original factory settings?

Make sure that your Keenetic Access Point is connected to a power supply. Press and hold the **Pinhole Reset Button** ↻ until the **Status LED** begins to blink green rapidly, release the button and wait while your Access Point restarts.

Important: After restoring factory settings, you will need to add the Keenetic Access Point back to your Network Controller or manually reconfigure it.

Safety Instructions

- Your Keenetic device is designed for indoor use only and must not be used outdoors.
- Before use, remove protective labels from your Keenetic device, and ensure vents are unblocked.
- Never use your Keenetic device in an enclosed space, and ensure that the Keenetic-supplied power adapter is always easily accessible.
- Use only the Keenetic-supplied power adapter. Discontinue using a damaged adapter immediately.
- Your Keenetic device and its power adapter contain no user-serviceable parts — DO NOT OPEN.
- Keep your Keenetic device away from water, excessive humidity or heat, and direct sunlight.

Environmental Conditions

- Operating temperature range: 0 to +40 °C.
- Operating humidity: 20 to 95% non-condensing.
- Storage temperature range: –30 to +70 °C.
- Storage humidity: 10 to 95% non-condensing.

Certification Information

CE

Keenetic Limited hereby declares that this device is in compliance with all relevant provisions of directives 2014/53/EU, 2009/125/EC, and 2011/65/EU. Details of the original EU declaration are available at **keenetic.com** on the specific model pages.

This device complies with EU radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 cm between the antennas and a person's body.

The frequency and the maximum transmitted power for your device, per the requirements of the EU are listed below:

2400-2483.5 MHz: 20 dBm;
5150-5350 MHz: 23 dBm;
5470-5725 MHz: 30 dBm.

This device will support DFS and TPC functionality while operating in the 5 GHz band.

	AT	BE	BG	CH	CY	CZ	DE
	DK	EE	EL	ES	FI	FR	HR
	HU	IE	IS	IT	LI	LT	LU
	LV	MT	NL	NO	PL	PT	RO
	SE	SI	SK	TR	UA	UK	

This device is restricted to indoor use only when operating in 5150 to 5350 MHz frequency range (channels 36 - 64).

Per (EC) No 1275/2008, the power consumption in networked standby if all wired network ports are connected and all wireless network ports are activated is 7.6 W.

This device can be used across EU member states.

Device Warranty

For the most up-to-date Warranty Information, please visit our website, **keenetic.com/legal**.

Your Keenetic device comes with a non-transferable 3-year warranty from the documented date of purchase (including your 2-year European Limited Warranty). Valid claims in case of a defect will be honoured subject to local legal requirements.

Notice

When you use your Keenetic device (including when you connect your Keenetic device the first time), Keenetic Limited will process certain personal data about you, e.g., service tag, serial number, model name, software version, and IP address of your Keenetic device.

For more information, please go to **keenetic.com/legal**.

If you are in the European Union / European Economic Area, Keenetic GmbH will process certain personal data about you, e.g., service tag, serial number, model name, software version, and IP address of your Keenetic device. Please read our Device Privacy Notice for the European Union / European Economic Area at **keenetic.com/legal**.
For reporting and information on possible vulnerabilities in Keenetic products and coordinated vulnerability disclosure, visit: **keenetic.com/security.**

Disposal

In accordance with European directives, your Keenetic device, including the power adapter and cables may not be disposed of with general household waste. Consult your local authority or your supplier for information about disposal.